

SC-LOCKER-12	SC-LOCKER-24	CSC-LOCKER-8	CSC-LOCKER-16

AC/SC/CSC-LOCKER 8/12/16/24 BAY SECURE RFID CHARGING LOCKERS

CHARGING LOCKERS

Quick Start: Operation With Card

Step-1: Press "Storage" under CARD.

Power Technologies





Step-3: Press "Take out" under CARD



Step-4: Place or swipe CARD on Card Reader





Step-1: Press "Storage" under Password.



Step-2: Input a 4-Digit Password



Step-3: Press "Take out" under Password

Step-4: Press the bay you would like to access

Step-5: Input your Password









Step-1: Press & hold the top left corner for 3 seconds



Step-2: Enter the Admin Password (<u>support@powertechnologies.com</u> for your Factory Default Password)



Step-3: Access settings by pressing "Gear" icon

Step-4: Press "PASSWORD"

Step-5: Input both old & new Passwords









Step-1: Press & hold the top left corner for 3 seconds



Step-2: Enter your Admin Password



Step-3: View log by pressing "NOTE" icon



Step-4: Review Access Data





Adjusting Single Bay Settings

Step-1: Press & hold the top left corner for 3 seconds



Step-3: Press the Bay you would like to modify



Please enter the password. Please enter the password. CANCEL SUBMIT Storage Take out Password 1 2 arc 4 or 5 arl 4 or 5 arl 7 press 8 may 9 waz © 0 ,

Step-2: Enter your Admin Password

Step-4: Adjust parameters



6

- A- SINGLE OPEN Opens Bay once
- B- SET TO DAMAGE Marks Bay as Damaged and unaccessible by users
- C- SINGLE CLEAN Clears Bay Access Data



Admin Options

Step-1: Press & hold the top left corner for 3 seconds



Step-3: Press the Bay you would like to modify



- A- ADMINISTRATOR CARD Sets up a master access card
- B- FULL OPEN Opens all Bays at once
- C- FULL CLEAN Clears All Bay Access Data
- D- USE CAP Allows user to access up to 3 Bays

Step-2: Enter your Admin Password



Step-4: Adjust parameters



- E- CABINET LIST Toggles view of Bay Number
- F- OPEN MODE Allows for both Card & Password
- G- CONFIRM PASSWORD Toggles confirmation of password
- H-ARRANGEMENT MODE Sets Locker to either Vertical or Horizontal layout

- PROMPT TONE Toggles Voice Alert
- J- PASSWORD Changes Admin Password
- K- EXIT APPLICATION PLEASE AVOID! Exits Android App



The power is out and I need access

Open the Upper and Lower Access Door Lock with key. Then, Push down on each Release lever to open Bays.

I don't see the main menu.

Screen Saver activated; Press the screen.





A User no longer remembers password

Follow the instructions for Single Open, then Single Clean on page 34

Someone exited the App

Press the Android Home Button Then Press "Cabinet" App icon





Background management :

Power Technologies

Long press the upper left corner or the powertechnologies logo and the following picture will appear, enter the management password or use the management card, click SUBMIT to enter the setting page. (See section on setting Admin card or password for detailed instructions)

The settings are as follows:

<		NOTE	٥
Used1	Empty11 0		
	ацьсок	19	
	sirock	20	
	3(LCCK	5)	
	4(L00K	η	
	S(LCCH	9)	
	60.000	11)	
	7(L0081	13)	
	8)1.0 (81	5}	



- 1. Used: used quantity; Empty: unused quantity; Damaged: Damaged quantity
- Click on the locker in the list to pop up the operation menu. In different modes, the corresponding operation menu options, see "Mode"
- 3. Click "note" to enter the record page.
- 4. Click, enter the detailed setting page.



Record



Step-1: Click search icon, filter the record list.



 Records completed: Whether to display the records of the completed access process.
 ALL CARD Password: Filter by access method.

Step-2: Click on the above circled icon , if it is connected to Wi-Fi, enter the email address to share and share it (Note: Basic settings->EMAIL needs to be configured)

<	Wi⊦Fi	
Select Wi-Fi		
Please enter II	te password	
	Seimit	
<	note 🗂	Q
Dase number 1 0 Net line : 2022/12/	per mole: Password 1234 01/02:00:21 now	
Recei	ving email address	П
Ľ	GANCEL	SUBMIT



ADMINISTRATOR CARD

Power Technologies

Shows code of Admin card and allow access to add additional admin cards.

FULL OPEN

Opens all bays and maintains last setting for each bay

CABINET LIST: NO DISPLAY

Used for assignment of bays.

- No display offers next available bay
- Display user can select the bay they want

OPEN MODE

Define is it can only be opened with a card or with card and password.

CONFIRM PASSWORD – YES / NO

Require user to enter password once or second time to confirm.

BASIC SETTING: BACKGROUND

Select different background option.

EXIT APPLICATION

Exits the locker control application to the Android tablet. This provides access for file management, etc.

Setting(Version:5.8.2))
------------------------	---

ADMINISTRATOR CARD

FULLOPEN

Common settings

CABINET LIST:NO DISPLAY

-

SCROLL DIRECTION: VERTICAL

OPEN MODE: CARD AND PASSWORD

CONFIRM PASSWORD:ON

PASSWORD LENGTH:4

FULL CLEAN

USE CAP

PRESET LISTS: OFF

Mode

TOUCHLESS MODE: OFF

PRE-ASSIGN PASSWORD MODE:OFF

STANDARD MODE:ON

DEVICE STORAGE MODE: OFF

GROUP:OFF

GROUP SETTINGS

Basic settings

BACKGROUND

PASSWORD

EXIT APPLICATION

AFFEIGATION

AUTO-EXIT TIME

AUTO-EXIT TIME

EMAIL

ABOUT

FULL CLEAN

Opens all bays and resets last setting.

USE CAP

Defines the maximum number of bays a customer can use 1-3.

PASSWORD LENGTH

Set requirement for length 4,5 or 6 digits. Preset Lists

• Yes – a preset list of user id's are loaded by the admin and only those users can access the locker.

• No – anyone can access and use the locker.

PASSWORD

Change admin password.

AUTO EXIT TIME

Elapsed idle time before admin screen closes.

EMAIL

Set admin email for emailing data log.





Power Technologies

Enter this page, scan the card on the card reader, and the card information will be added automatically. Click on a piece of information in the list to delete.

<	Administrator Card
F375D6AA	
9300B5AA	

Step-2: FULL OPEN

All locker doors will be opened, save previous setting for bay access

Step-3: FULL CLEAR

Empty all and open locker doors, resets all passwords and settings on bay access.

Step-4: COMMON SETTINGS

All locker doors will be opened, save previous setting for bay access

CABINET LIST:

Whether to display a selection list during the save process.

• USE CAP:

Set a maximum number of lockers that can be used for a card.



• SCROLL DIRECTION:

Displays the scrolling direction of the list (VERTICAL, HORIZONTAL). The picture below is VERTICAL.

<	ΝΟΤΕ 🧿	
Used0 Empty24		
1(LOCK1)	2(LOCK2)	
3(LOCK3)	4(LOCK4)	
S(LOCKS)	6(LOCK6)	
7(LOCK7)	8(LOCK8)	
9(LOCK9)	10(LOCK10)	
11(LOCK11)	12(LOCK12)	
13(LOCK13)	14(LOCK14)	
15(LOCK15)	16(LOCK16)	



SCROLL DIRECTION: When HORIZONTAL, ARRANGEMENT MODE can be set. The picture below shows ARRANGEMENT MODE: VERTICAL

<	NOTE	o
Used0 Empty	/24 Damaged0	
1(LOCK1)	7(LOCK7)	13(LOC
2(LOCK2)	8(LOCK8)	14(LOC
3(LOCK3)	9(LOCK9)	15(LOC
4(LOCK4)	10(LOCK10)	16(LOC
5(LOCK5)	11(LOCK11)	17(LOC
6(LOCK6)	12(LOCK12)	18(LOC

The picture below is ARRANGEMENT MODE: HORIZONTAL

<	NOTE	o
Used0 Empty	/24 Damaged0	
1(LOCK1)	2(LOCK2)	13(LOC
3(LOCK3)	4(LOCK4)	15(LOC
5(LOCK5)	6(LOCK6)	17(LOC
7(LOCK7)	8(LOCK8)	19(LOC
9(LOCK9)	10(LOCK10)	21(LOC
11(LOCK11)	12(LOCK12)	23(LOC



Step-5: OPEN MODE

CARD AND PASSWORD - CARD ONLY When OPEN MODE: CARD AND PASSWORD, you can choose whether to enter the password twice for confirmation, and you can modify the password length (password length: 4, 5, 6)

Step-6: PRESET LISTS

Whether to use the default list When PRESET LISTS: ON, click MANAGE LISTS to edit the list, as follows:



1) Click "Import": import csv file data.

(i) The name of the csv file must be: cardInfo_file.csv The csv file format is as follows: (important: the card number must be obtained through the same type of card reader in the locker)

	E13	-	₿ ƒx	
	А	В	С	D
1	FirstName	LastName	Card	
2	Aaron	Smith	235993AB	
3	Abel	Wilson	63299AAB	
1	Abraham	Johnson	532998AB	
5	Adam	Jones	33C883AB	
3	Adrian	Taylor	535A84AB	
7	Alva	Brown	D5678623	
3	Alex	Jones	E339E1AA	
)	Alexander	Taylor	43D7DFA	4

(ii) The csv file must be copied to this directory: \YF_XXXG\Internal storage\Android\data\com.haijie. smartiot\files\

Alarms		
🕫 🚞 Android		
🔻 🛅 data		
.nomedia	2021/5/10 09:05	0字节
com.android.browser		
🔻 🚞 com.haijie.smartiot		
🔻 🛅 files		
cardInfo_file.csv	2022/8/15 08:38	254 字节
MattConnection		
CABINET_d4d2d68aba1e.xis	2022/5/24 08:02	4 KB
DCIM		
⊦ 📄 Download	-	-
► 🛅 Movies		
Music		-
Notifications		-
Pictures		-
Podcasts		
Ringtones		

- 2) Click "clear": clear the list.
- 3) Click on an item in the list to delete it.

FirstName: Abel LastName: Wilson Card: 53299AAB FirstName: Abraham LastName: Johnson Card: 532998AB FirstName: Adam LastName: Jones Card: 33C983AB FirstName: Adam LastName: Taylor Card: 535A64AB FirstName: Adva LastName: Brown Card: D5678623 FirstName: Alex LastName: Jones Card: E339E1AA FirstName: Alex LastName: Jones Card: E339E1AA FirstName: Are you sure you want to delete this card33E192AB FirstName: test LastName: test Card: 33E192AB	<	Preset lists CLEAR IMPORT
FirstName: Abraham LastName: Johnson Card: 532908A8 FirstName: Adam LastName: Johnson Card: 33C983A8 FirstName: Adrian LastName: Taylor Card: 535A84AB FirstName: Adva LastName: Brown Card: D5678623 FirstName: Alex LastName: Johnson Card: E339E1AA FirstName Are you sure you want to delete this card33E192AB Emethod FirstName: test LastName: test Card: 33E192A8	FirstName:	Abel LastName: Wilson Card: 63299AAB
FirstName: Adam LastName: Jones Card: 33C983A8 FirstName: Adrian LastName: Taylor Card: 535A84AB FirstName: Adva LastName: Brown Card: D5678623 FirstName: Alex LastName: Jones Card: E339E1AA FirstName Are you sure you want to delete this card33E192AB FirstName: test LastName: test Card: 33E192A8	FirstName:	Abraham LastName: Johnson Card: 532998A8
FirstName: Adrian LastName: Taylor Card: 535A84AB FirstName: Alva LastName: Brown Card: D6678623 FirstName: Alex LastName: Jones Card: E339E1AA FirstName PirstName Are you sure you want to delete this card33E192AB FirstName: test LastName: test Card: 33E192A3	FirstName:	Adam LastName: Jones Card: 33C883A8
FirstName: Aixa LastName: Brown Card: D5678523 FirstName: Alex LastName: Jones Card: E339E1AA FirstName Delete FirstName Are you sure you want to delete this card33E192AB FirstName CANCEL SUBMIT	FirstName:	Adrian LastName: Taylor Card: 535A84AB
FirstName: Alex LastName: Jones Card: E339ETAA FirstNam Delete FirstNam Are you sure you want to delete this card33E192AB FirstNam CANCEL SUBMIT FirstName: test LastName: test Card: 33E192A3	FirstName:	Alva LastName: Brown Card: D5678623
FirstNam Delete FirstNam Are you sure you want to delete this card33E192AB FirstNam ErstName: test LastName: test Card: 33E192A3	FirstName:	Alex LastName: Jones Card: E339E1AA
FirstNam Are you sure you want to delete this card33E192AB FirstNam CANCEL SUBMIT FirstName: test LastName: test Card: 33E192A3	FirstNam	Delete
FirstNam CANCEL SUBMIT	FirstNam	Are you sure you want to delete this card33E192AB
FirstName: test LastName: test Card: 33E192AB	FirstNam	CANCEL SUBMIT
	FirstName	test LastName: test Card: 33E192A8



4) Swipe the card on the management page to automatically pop up the process of adding a card: enter the name to add

<	Preset lists	CLEAR IMPORT
FirstName; Abel LastNar	me; Wilson Card; 63299AAB	
FirstName: Abraham La	stName: Johnson Card: 5329984	AB
FirstName: Adam	lease fill in the name.	
FirstName: Adrian	FirstName	
FirstName: Alva Li	LastNama	
FirstName: Alex La	Lastname	
FirstName: Alexand	ADD CARD	
FirstName: Alan LastNar	me: Brown Card: C361D9AA	
FirstName: Anthony Las	Name: Brown Card: 3332DDAA	

C. "123460" is a card added before opening the pre-stored list. At this time, although the card information is displayed, it will not be enabled D. Click "IMPORT" to enter the pre-stored list selection page

<	Card management	IMPORT
10	iroup	
123460	Not added to the preset list	
D5678623	Alva Brown	
E339E1AA	Alex Jones	
C361D9AA	Alan Brown	
C361D9AA	Alex Jones Alan Brown	

- 5) The pre-stored list is turned on, and the relevant settings under each Mode
 - 1. STANARD MODE
 - 1.1) GROUP: OFF, no need to set
 - 1.2) GROUP: ON

GROUP:ON

GROUP SETTINGS

A. Click "GROUP SETTINGS" B. Click "CARD MANAGEMENT"



E. Click List Data. If the card is not used, it will be selected, click "IMPORT" to add the selected card to the selected group





2. Click the list data, if the card is not used, it will be selected, click "IMPORT", and the selected card will be added to the selected group

<	Select cards	IMPORT
FirstName:	Abel LastName: Wilson Card: 63299AA8	
FirstNormeC	Abraham LastName: Johnson Card: 532948A8	
FirstName:	Adam LastName: Jones Card: 33C883AB	
FirstName:	Adrian LastName: Taylor Card: 535A84A8	
FirstName:	Alva LastName: Brown Card: D5578523	
FirstName:	Alex LastName: Joses Card: E329E1AA	
FirstName:	Alexander LastName: Taylor Card: 43D7DFAA	
FiretNemet	Alan LastName: Brawn Cerdl: 056109AA	
FirstName:	Anthony LastName; Brown Card: 333200AA	
FirstName:	Aaron LastName: Smith Card: 23599348	

- 3. DEVICE STORAGE MODE NO NEED TO SET
- 4. TO PRE-ASSIGN PASSWORD MODE NO EFFECT

Step-7: BASIC SETTINGS

1) BACKGROUND

Modify the background

- 2) PASSWORD Change Admin Password
- 3) EXIT APPLICATION

Exit application

4) AUTO-EXIT TIME

When the page is not exited, set the automatic exit time without any operation.

5) EMAIL

On the outbox authorization page, fill in the outbox address and authorization code.





Thank you for choosing the Power Technologies AC/SC/CSC-LOCKER Series Charging Lockers.

The Firmware controlling your Locker may be out of date and can be updated easily by following all the steps in this guide.

Please review this guide entirely before starting the update process.

Contact Support@PowerTechnologies.com for the Firmware Download Link



REQUIRED ITEMS

NEW FIRMWARE FILE .APK



PC OR MAC LAPTOP



6' USB TO MICRO-USB CABLE



Exiting App

Step-1: Press & hold the top left corner for 3 seconds



Step-2: Enter the Admin Password or scan your Administrator Card



Step-3: Access settings by pressing "Gear" icon



Step-4: Press "EXIT APPLICATION"





Un-Installing the App

Step-5: Open the system settings



Step-6: Click on the apps to get your pre-installed application.

Step-7: Open up the cabinet app.



Step-8: Unistall the cabinet application



Step-9: Press the Android Home Button



Step-10: Screen should look like this



Connecting A Laptop

Screen On the Upper Cabinet of your Locker, insert key into Lock and open door.

Power Technologies

Locate the micro-USB Port on top of the Touch Screen and attach Micro USB cable from Laptop to the Locker.





Step-1: From your Laptop, select the connected "YF_****" Device, then press "Internal Storage".



Step-2: Drag and drop the new firmware file from your Laptop to the Internal Storage of the Device.



Loading Latest Firmware

Step-3: From the Locker, press the "File Manager icon

Power Technologies



Step-4: Press the new firmware file



Step-5: Installation will begin



Step-6: Once complete, locker is ready to use





Further Information

For further information on this product and others, contact Power Technologies at.

Power Technologies 42035 Zevo Dr Temecula, CA 92590+ 888.650.4488

support@powertechnologies.com

www.powertechnologies.com