



# **AC-45**

## **45 BAY SMART CHARGING CART USER MANUAL**

The AC-45 is a movable charging station and charges the device fastly.

**Specifications:**

Model		AC-45
Cart Dimensions	Inch	44.5 (H) x 30 (W) x 23.6 (D)
	mm	1130 (H) x 762 (W) x 600 (D)
Shelf Dimensions	Inch	14.5 (D) x 10.5 (H) & Divider Spacing: 1.18 (standard) & 2.6 (wide)
	mm	368 (D) x 266 (H) & Divider Spacing: 30 (standard) & 66 (wide)
Product Weight (Without Devices)		202 lbs (91.6 kg)
Shipping Weight		217 lbs (98.4 kg)
Capacity		45 bays (3 shelves, 15 bays/shelf)
Supported Devices		Devices up to 14 inch (356 mm)
Power Specifications (For carts sold within North America)		AC IN/ Power Strip: 110V AC, 50/60Hz, 10A Maximum power: 1400W
Power Specifications (For carts sold outside North America)		AC IN/ Power Strip: 100-240V AC, 50/60Hz, 10A Maximum power: 2400W
Charging Type		Smart Cycle Charging
Security		Front door 3 point mechanism with lockable, Back door 2 point mechanism
Casters		Four 4 inch (102 mm) Casters; 2-Locking, 2- Directional
Work Platform Loading		55.1 lbs (25 kg)
Shelf Loading (ea.)		110.2 lbs (50 kg)
Adapter Shelves Loading (ea.)		6.6 lbs (3 kg)
Working Temperature		0°- 30°c
Working RH%		10% - 90%
Storage Temperature		-40°- 60°C Temp
Storage RH%		5% - 95%
Warranty		Lifetime Frame, 2 Years Components, 2 Year Electronics

Specifications subject to change without notice.



This manual covers the following models and part numbers.  
 The manual is based upon the North American 110V product offering.  
 Refer to the part numbers below and cord end diagrams for your specific region.

## MODEL# AC-45



SKU	DESCRIPTION
AC-45	AC-45, 45 Bay Secure Charging Cart - 110V NA (Legacy Number)
CRT-PLS-S45L-D	AC-45, 45 Bay Secure Charging Cart - 110V NA
CRT-PLS-S45L-E	AC-45, 45 Bay Secure Charging Cart - 220V EU
CRT-PLS-S45L-U	AC-45, 45 Bay Secure Charging Cart - 220V UK
CRT-PLS-S45L-A	AC-45, 45 Bay Secure Charging Cart - 220V AU
CRT-PLS-S45L-S	AC-45, 45 Bay Secure Charging Cart - 220V SW

## Power Cords and Sockets for Specific Region:



### US / Canada

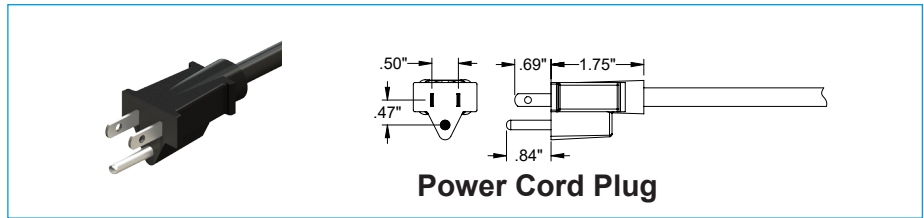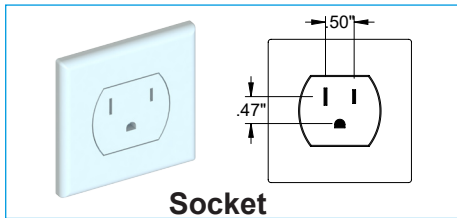



### United Kingdom

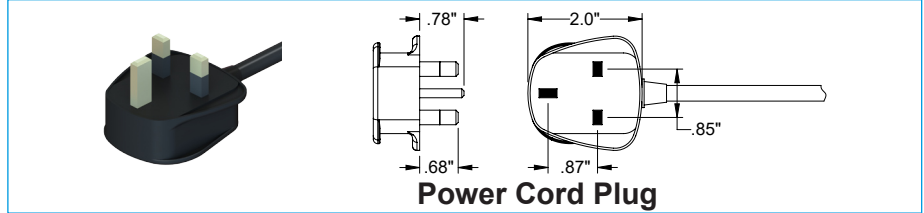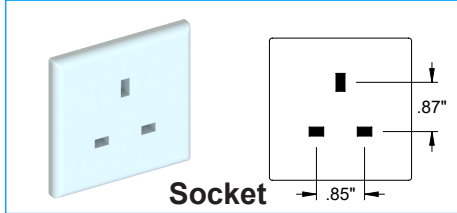



### European

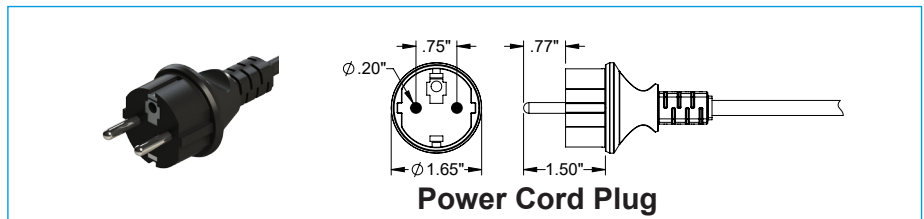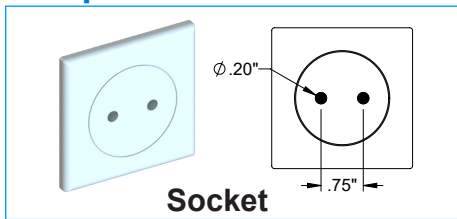

### Australian

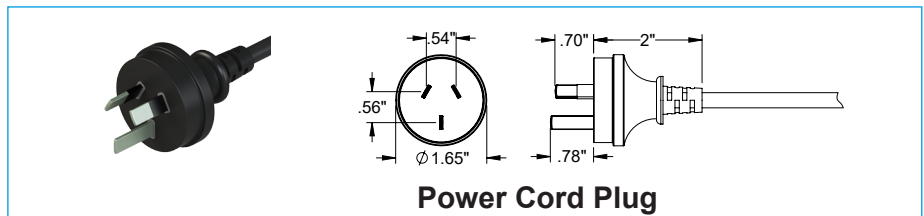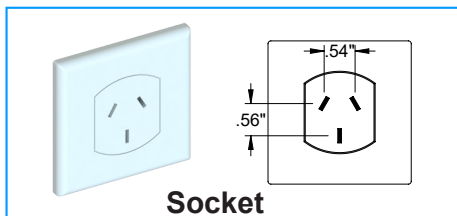


### Switzerland Type-J

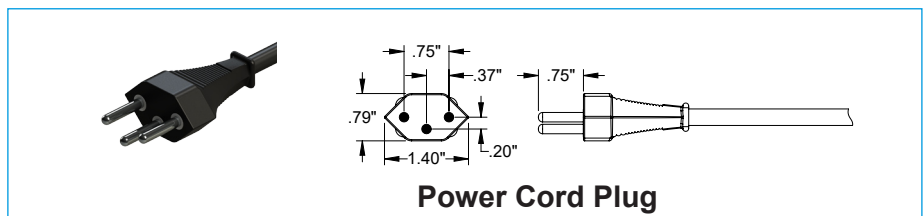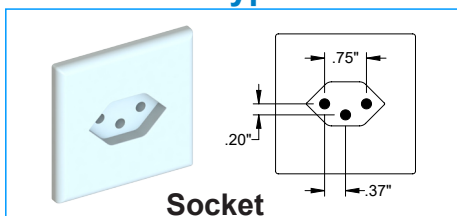

# Product Information

The AC-45 is designed to charge and store up to 45 Chromebooks, Laptops or tablets.

**NOTE:** Please review this guide before installing devices and to learn how to safely use your cart.

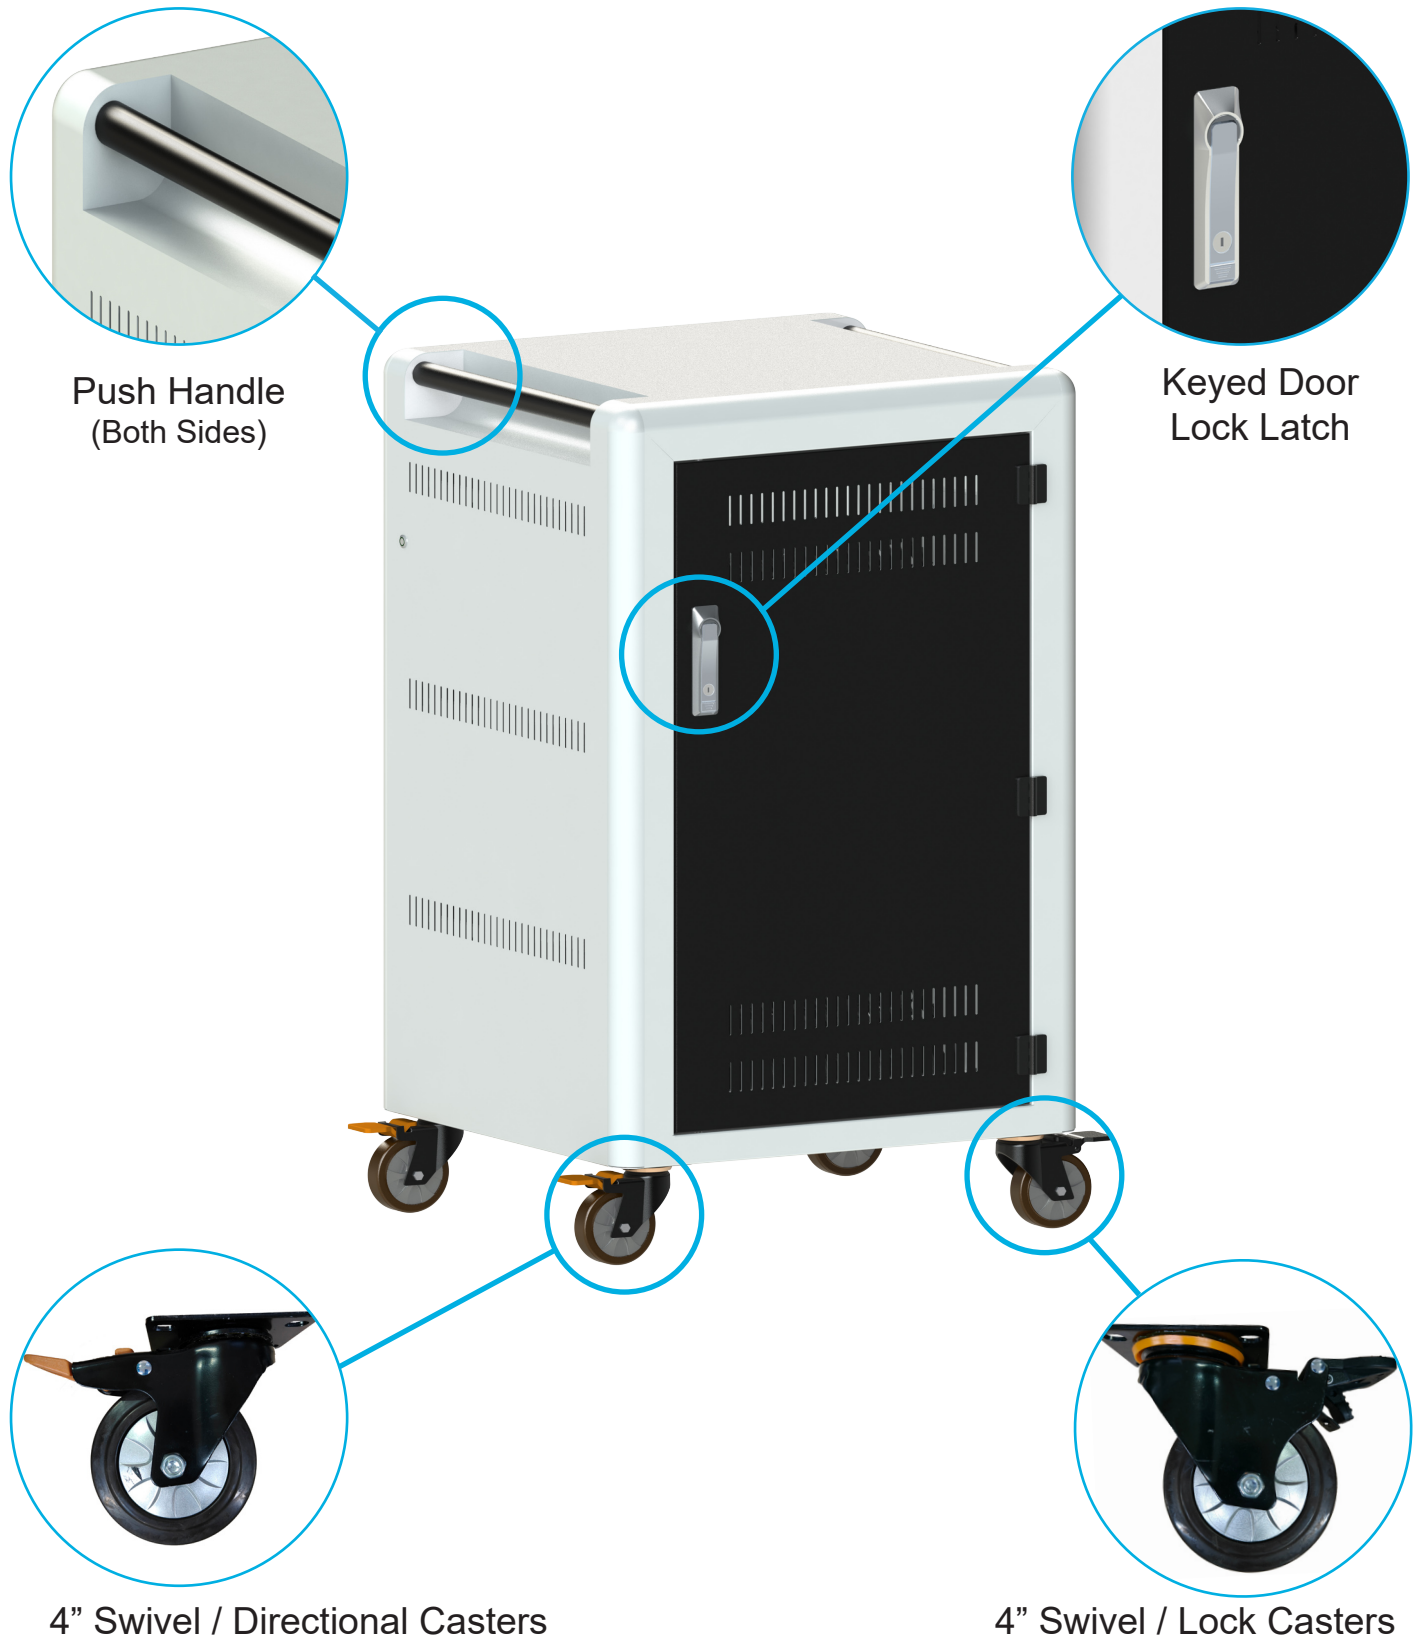

Front View of Cart

- If the device (Laptop / Chromebook) thickness is more than the gap between the dividers, remove one of the dividers to create enough space for your device.


External Power Button

Removable Dividers



Front View of Cart

- Removable adapter baskets are used to hold the device accessories, power adapter and allow power cables.

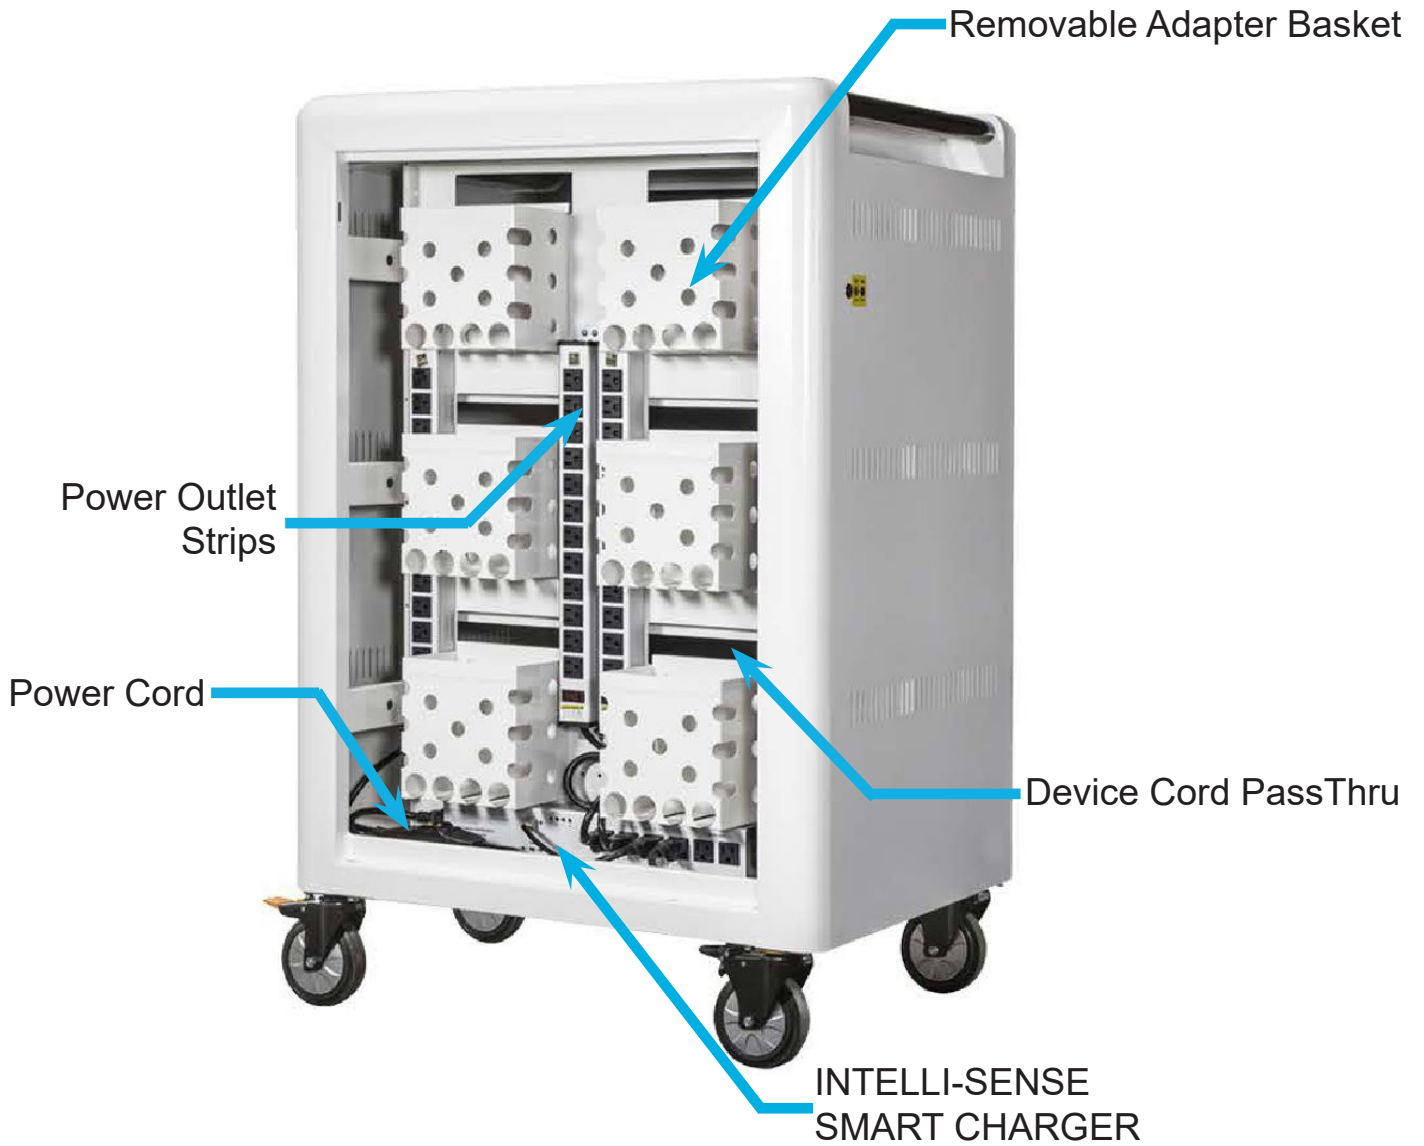


Rear View of Cart


## SETTING UP DEVICES (FRONT):




**Step-1:** Using a ruler, measure the thickness of your device

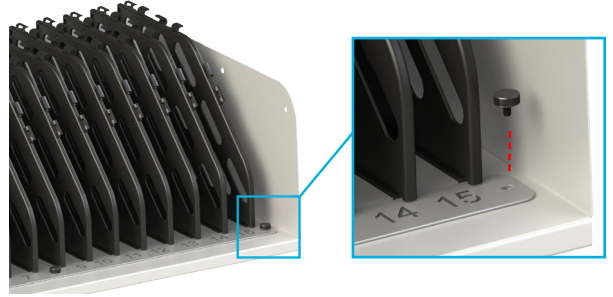

**Step-2:** If device is thicker than 1", locate & remove thumbscrews on shelf.

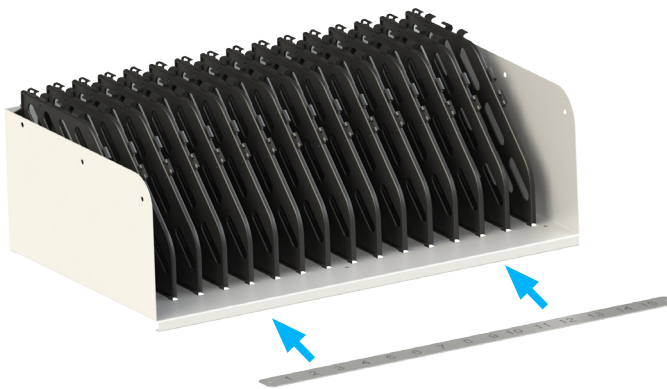

**Step-3:** Remove Retaining Strip

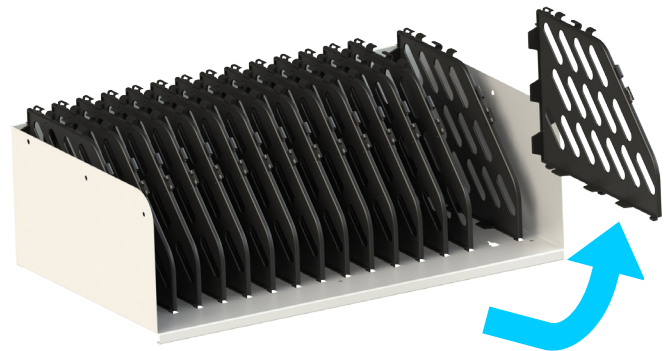

**Step-4:** Pull forward, then up to remove the Divider.




**Step-5:** Adjust spacing as needed



**Step-6:** Place Strip in position & replace thumbscrews.

## SETTING UP DEVICES (BACK) :

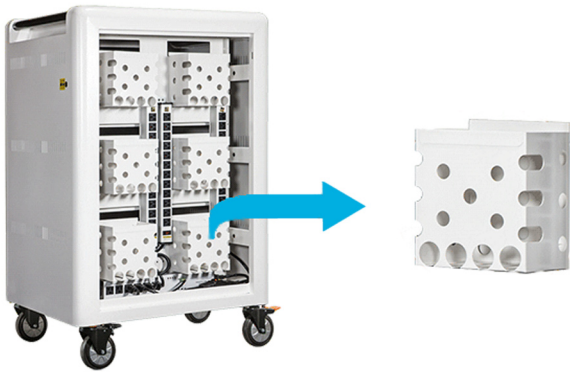

**Step-1:** Remove basket by pulling upward first, then pull forward.




**Step-2:** If your device power adapters are “brick” style, feed power cables through holes and place no more than 6 into a basket




**Step-3:** Hook basket(s) in place & distribute power cords so that all power strips have an equal number of devices plugged in.



**Step-4:** Feed device cables into pass-thru slots to front of cart.

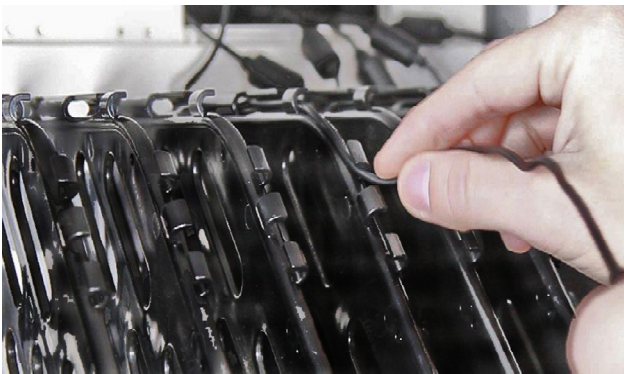


**Step-5:** Working up front, weave device cables into divider tabs.

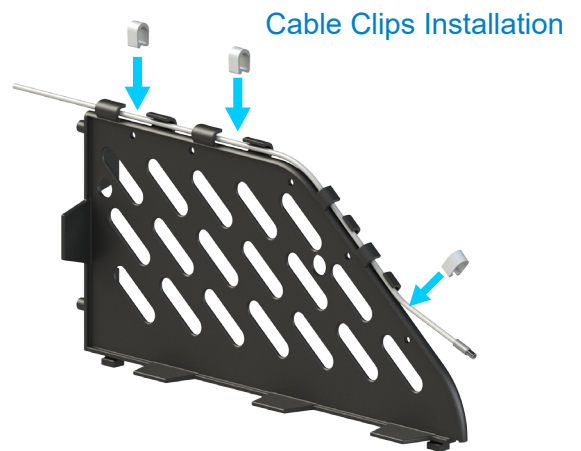

**Step-6:** Use the supplied Cable Clips to fasten each cable to the divider by pressing down firmly, securing the cable in place.



**THE ELECTRICAL SYSTEM IS DESIGNED TO HANDLE A MAXIMUM OF 14 AMPS.**

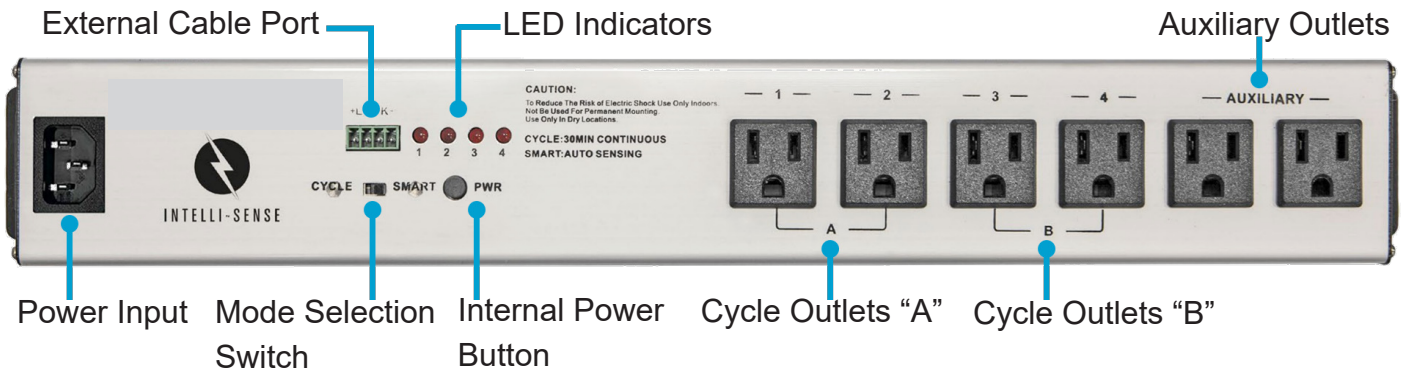

## Quick Start Tips:

- Plug in device adapters so there are an equal number of devices in Group A and Group B.
- Make sure the Mode Selection Switch is set to "SMART" mode.
- Plug in cart.

The Intelli-Sense timer will automatically sense the charging needs of the cart and start charging in the most efficient and quickest method.

Within 5 seconds of plugging in your cart's power cord, your INTELLI-SENSE Smart Charging System will initiate an test of your devices charging level requirements.

Devices which are plugged into power strips that draw the most power will take priority and can take up to 2 hours before switching to the next set of outlets. Once devices are fully charged, the system will remain in a trickle charging state, maintaining your devices battery levels.

With Mode Selection Switch set to SMART:

Group Outlets "A" and Group Outlets "B" power on for 8 seconds in sequence then enter the following modes depending on current draw.

### If the total current draw is greater than 9A:

The group outlets with the highest current draw will power on, while the group with less current draw remains OFF. Once the current draw difference is within 0.5A, the system will switch to the other group. When the total current is less than 9A, all outlets will power on at the same time.

### If the total current draw is less than 9A:


Group "A" and Group "B" power on at the same time. The total output is continuously monitored in case a new device is added.

Group Outlets "A"	Group Outlets "B"
7 Amp load	5.5 Amp load
ON	OFF
5 Amp load	5.5 Amp load
OFF	ON
5 Amp load	4.5 Amp load
ON	OFF
4.5 Amp load	4.5 Amp load
ON	ON

## NOTE:

If wattage exceeds 14 Amps or about 1400 Watts at one time, the charging system may not operate correctly.

Review your device's AC Adapter wattage, multiplying it by 23.

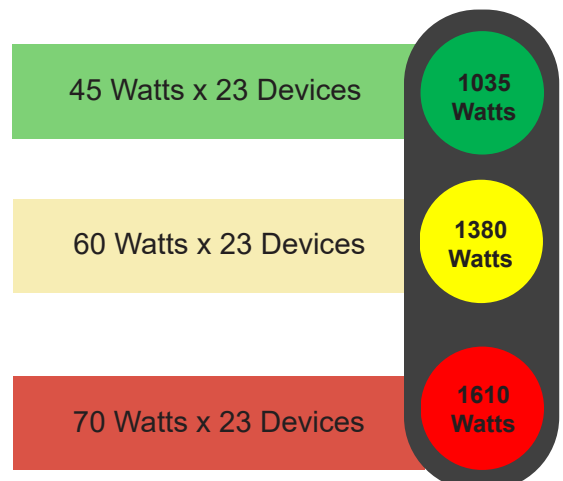

# Casters Positions

This cart is equipped with Casters that have an “Orange” color foot pedal.



Engage the Directional Locking Casters by pressing the orange foot pedal down. Your cart will now easily track in a straight line.

Release the Direction Lock by lifting up on the foot pedal. The cart will have its full swivel motion restored.




“Engage the “BLACK” foot pedal to securely lock the wheels, keeping the cart safely in place.”

“Engage the “ORANGE” foot pedal for a seamless and precise straight-line movement, making navigation a breeze.”

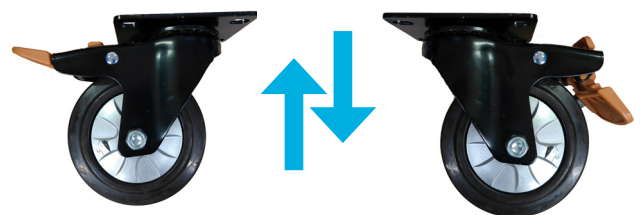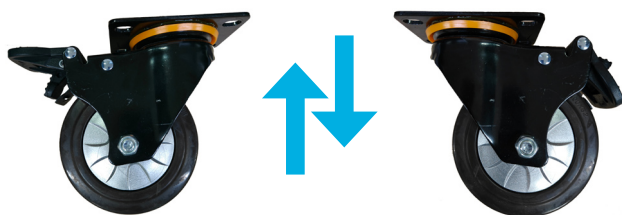

“With a simple release of the “BLACK” foot pedal, allowing you to navigate effortlessly with unparalleled flexibility.”

“With a simple release of the “ORANGE” foot pedal, embrace a world of precision and grace in your swivel motion, making maneuvering a breeze.”

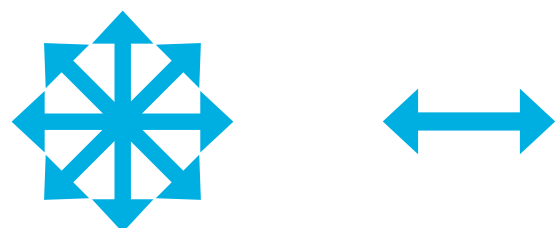

# Safety Instructions

	<b>Caution</b>
	<b>Notice</b>

**THIS IS NOT A TOY.  
ALWAYS FOLLOW SAFETY INSTRUCTIONS.**

	<b>Danger</b>
	<b>Warning</b>

**DO NOT Pull the cart using power cord**

**Important**

THE ELECTRICAL SYSTEM IS DESIGNED TO HANDLE A MAXIMUM OF 1400 WATTS per side. If wattage exceeds 1400W at one time, charging system may not operate correctly. Remove devices until the total wattage is under 1400W.

**Don't connect the cart with broken electrical components.**

**DO NOT place liquids on or near the cart**

- ALWAYS move the cart slowly and be aware of your surroundings
- ALWAYS latch doors before moving the cart
- Repairs should always be performed by a qualified electrician.
- Set the power switch to the OFF position before you unplug the unit from the wall, plug the unit into the wall, or plug in devices.
- If external devices are set on top of the cart, remove them before rolling cart around.
- DO NOT block the ventilation holes used for air circulation.

**DO NOT touch any part of the electrical system while plugged in.**

**DO NOT attempt to move downstairs.**

For warranty claims, please have the following information ready, then visit [www.powertechnologies.com](http://www.powertechnologies.com) to create a help ticket.

**DO NOT use an extension cord with this unit.**

**DO NOT Roll the cart over the power cord**

Serial Number:

-----

**DO NOT allow children to move or climb.**

**DO NOT ride or run with the cart.**

Charging System Type:

-----

Date Of Purchase:

-----





Reseller Name:

-----

PO Number:

-----

**ONLY ADULTS should move the cart.**

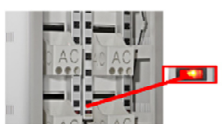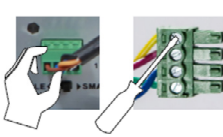TROUBLE	Indication	Possible Cause	How to check	Where to check	Remedy
External LED Button is flashing green and devices are not charging	Overload Protection Mode has been activated	Wattage exceeded 1400 Watts at one time	Multiply your device's AC adapter wattage by 23.		Reduce the number of devices if necessary and resume charging
System does not power on	External LED Button does not flash	Power cord is not secured properly	<ul style="list-style-type: none"> <li>Check the main Power Cord into the Power Input port located on the left side of the Charging System if it is secured properly.</li> <li>Plug the cart into a wall outlet and press the internal Power Button labeled PWR directly on the Charging System.</li> <li>Remove power cord and plug in a PC monitor style IEC Power Cord.</li> </ul>		If one or more Power Strips no longer works, replace as needed
Few /All Devices do not get charged works	No visible indication	Power cord failure	<ul style="list-style-type: none"> <li>Open the rear panel door and locate the 4 vertically mounted Power Strips.</li> <li>Verify each switch is in the "RESET" position, not the "OFF" position.</li> <li>Using an extension cord, test each Power Strip by unplugging each cord from the charging system and plugging them into the extension cord.</li> </ul>		Replace the power cord if found faulty
External Power Button not works	External LED Button does not flash	Power Strip failure	<ul style="list-style-type: none"> <li>With your cart plugged in, open the rear panel door and press the internal Power Button labeled PWR on the charging system.</li> <li>Plug the External Cable back in and press the External Power Button.</li> </ul>		<ul style="list-style-type: none"> <li>If your cart powers on, unplug the External Cable from Charging System</li> <li>Using a small flat head screwdriver, ensure all individual wires are secure.</li> <li>Replace the power button if found faulty.</li> </ul>

**For further information on this product and others, contact Power Technologies at.**

Power Technologies  
42035 Zevo Dr  
Temecula, CA 92590+  
888.650.4488

[support@powertechnologies.com](mailto:support@powertechnologies.com)

[www.powertechnologies.com](http://www.powertechnologies.com)

---